



The MVP Quik-Code system is compatible with HomeLink®. HomeLink is a registered trade mark of Johnson Controls, Inc. Code the transmitter as below then program the HomeLink® system.

MVP QUIK-START GUIDE - CODING THE TRANSMITTER

CODING THE MVP TRANSMITTER IS LIKE SETTING DIP SWITCHES

THE THREE PUSHBUTTONS FUNCTION AS THE DIP SWITCHES

THERE ARE THREE EASY STEPS TO CODING THE TRANSMITTER

1. PUT TRANSMITTER IN PROGRAM MODE
2. SELECT PUSHBUTTON TO CODE
3. ENTER NINE POSITION CODE

WRITE YOUR 9 POSITION CODE(S) BELOW

	CODE POSITION								
	1	2	3	4	5	6	7	8	9
Plus (+) Button									
Zero (0) Button									
Minus (-) Button									


1 PUT TRANSMITTER INTO PROGRAM MODE

- THIS IS DONE BY FIRST PRESSING THE " + " BUTTON AND THEN PRESSING THE " - " BUTTON
- HOLD BOTH BUTTONS UNTIL THE LED BLINKS AND RELEASE IMMEDIATELY
- THE TRANSMITTER IS NOW IN PROGRAM MODE



2 SELECT PUSHBUTTON YOU WANT TO CODE

- PUSH THE BUTTON YOU WANT TO PROGRAM
- THE LED WILL BLINK ONCE

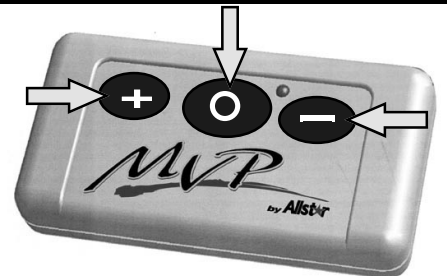

3 ENTER THE NINE POSITION CODE

- PUSH THE BUTTONS THAT CORRESPOND TO THE CODE YOU SELECTED ABOVE
- THE LED WILL BLINK TWICE WHEN FINISHED

CONGRATULATIONS! YOUR TRANSMITTER IS CODED.

FOR INSTRUCTIONS ON CODING ALL THREE BUTTONS AT THE SAME TIME, SEE EXPRESS CODING INSTRUCTIONS BELOW.



EXPRESS CODING

- ALLOWS YOU TO CODE ALL THREE BUTTONS WITH A SINGLE CODING PROCESS - FOLLOW STEPS 1, 2, & 3 AS ABOVE EXCEPT :
 - SELECT THE " + " BUTTON IN STEP **2**
 - END THE ENTERED CODE IN STEP **3** WITH THE NINTH (LAST) POSITION AS A " + " BUTTON ENTRY



ALL THREE TRANSMITTER BUTTONS ARE NOW CODED.

MVP QUIK-START GUIDE
TEACHING THE OPERATOR THE TRANSMITTER CODE




PRESS PROGRAM BUTTON ON DELUXE WALLSTATION
 RED LED AND WORKLIGHT ON THE OPERATOR WILL TURN ON
 (IF LED AND WORKLIGHT BLINK PRESS AND HOLD PROGRAM
 BUTTON FOR 5 SECONDS TO CLEAR MEMORY AND START OVER)
 TRANSMIT DESIRED PUSHBUTTON
 LED **AND** WORKLIGHT WILL TURN OFF
 (ENSURE WORKLIGHT **AND** LED TURN OFF - IF LED REMAINS ON
 WHEN YOU TRANSMIT A CODE - PRESS AND HOLD PROGRAM
 BUTTON FOR 5 SECONDS TO CLEAR MEMORY AND START OVER)



OPERATOR HAS BEEN PROGRAMMED
 NEXT TRANSMISSION WILL OPERATE THE DOOR

TIPS FOR MULTIPLE OPERATOR INSTALLATIONS

FIRST CODE ALL TRANSMITTERS USING **EXPRESS** CODING (SEE PAGE FRONT FOR DIRECTIONS)
 EXPRESS CODING ALLOWS YOU TO PROGRAM MULTIPLE BUTTONS WITH A SINGLE CODING PROCESS -
 THEN USE A SINGLE TRANSMITTER TO TEACH THE OPERATORS THE TRANSMITTER CODE

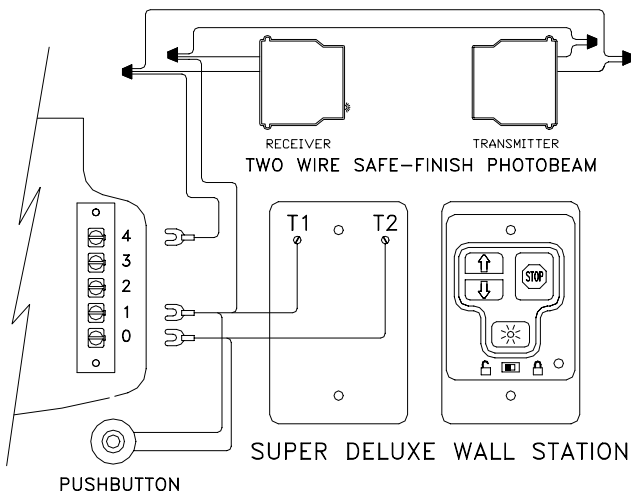

WIRING GUIDE

- TERMINAL 0:** Super Deluxe Wall Station/Pushbutton
- TERMINAL 1:** Common
- TERMINAL 2:** External Radio
- TERMINAL 3:** 24 VDC @ 20mA
- TERMINAL 4:** Photobeam

DIAGNOSTIC LED CONDITIONS

DIAGNOSTIC CONDITION	RED LED	GREEN LED
Normal operation	OFF	OFF
Learn Mode	ON*	OFF
Memory Full	ON FOR 25 SECONDS	OFF
Decode RF Signal	SHORT FAST BLINK	OFF
Shorted Pushbutton Wire	OFF	ON
Photobeam Obstruction	OFF	FAST BLINK
Contact Reverse	FAST BLINK	OFF
Stuck Relay	SLOW BLINK	OFF
Stuck Open Limit	OFF	SLOW BLINK

* Work light turns on and off in parallel with Red LED on rear panel of power head unit in radio learn mode

This device complies with Part 15 of the FCC Rules and with RSS-210 of Industry Canada. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



Document #111109
 REV E DEC 2002