

ACCESSING THE CODE SWITCH AND BATTERY COMPARTMENT

The model 318-1 CARPER-Transmitter case is composed of 2 halves which can be opened with a screwdriver. Once opened you will have access to both the code settings and the battery compartment. (See Diagram #1)

SELECTING A CODE

Set both transmitter and receiver switches to the code of your choice, being sure both are set the same since a different setting of just one switch will prevent operation. The digital code is determined by the position of 9 small switches numbered 1 through 9 located in the receiver and transmitter. Any combination of “+” “0” or “-” positions can be selected by using a pencil or ball point pen. (Note: The switches are in the “on” position when the switch is depressed towards the number) See Diagram #2

 


DIAGRAM #2

Once the codes have been set, check operation and reassemble the transmitter case.

OPERATIONAL CHECK

To check operation, move back a reasonable distance about 50ft. and press the transmitter button. Operation should be reliable at this distance but environment and location of both the transmitter and receiver will affect the range. Try different location and positions. If operation is still unsatisfactory, the problem may be isolated by:

1. Checking the door operator. If the door will not open when the wall button is pressed, the problem is likely to be the operator. If the door will open by pressing the wall button but not when the transmitter control button is pressed, the problem is probably in the transmitter.
2. Replacing the transmitter battery. If after performing the above operational check, the controls still do not function, they should be returned to your dealer for repair or replacement.

Caution: any changes or modifications in intentional or unintentional radiators which are not expressly approved by SAN HONG ENG could void user's authority to operate this equipment. This applies to intentional and unintentional radiators certified per part 15 of the FCC rules and regulations.

TRANSMITTER INSTALLATION

The transmitter is completely self-contained including battery and can be operated while held in hand and it may be added to your key chain using the slot provided.

TRANSMITTER BATTERY REPLACEMENT

Replacement battery – 12-volt alkaline lighter battery (Eveready A23 or equivalent). The transmitter battery can be checked or changed by opening the case using a screw driver.

Simply slide out the old battery and slide in the new, remembering to observe the battery polarity molded on the case in the bottom of the battery compartment.

Note that if the light on your transmitter fails to come on when you press the light button, you most likely have a weak or dead battery and it should be replaced. (see diagram #1)

CARPER – 318-1 DIGITAL MULTI CODE TRANSMITTER

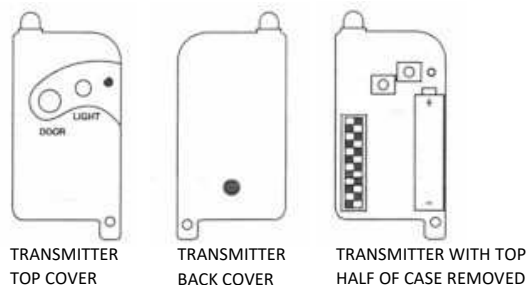


DIAGRAM #1

FUNCTION DESCRIPTION

- 1) Door Button: press the button. The garage door operation starts.
- 2) Light button: press the button, you can see objects in the dark.