

Universal Radio Control Kit Model 855CB

OWNER'S MANUAL



WARNING

Children operating or playing with a garage door opener can injure themselves or others. *The garage door could close and cause serious injury or death.*

Install the receiver (or any additional push buttons) out of the reach of children and away from all moving parts of the door and door hardware, *but where the garage door is visible*. Do not allow children to operate the push button(s) or the remote control transmitter(s).

A moving garage door could injure someone under it. Activate the opener only when the door is properly adjusted, you can see it clearly, and there are no obstructions to door travel.

Disconnect power to the garage door opener before proceeding.

To comply with FCC and DOC rules, adjustment or modification of receiver and/or transmitter is prohibited except for changing the code setting or replacing the battery. THERE ARE NO OTHER USER SERVICEABLE PARTS.

OPENER RECEIVER: Insert a small screwdriver in slot on receiver front panel as shown. Twist up actuator cover.

CONNECT RECEIVER AND OPENER: Remove about 1/4" of insulation from each end of the 2-strand bell wire. Connect one end to the receiver screw terminals (polarity is NOT required). Route wire along the channels and out the bottom as shown.

Connect the other end of the bell wire to the two opener terminal screws labeled "2" (white) and "1" (red), "common" and "command" or the terminals used for the push button control.

Use insulated staples (not supplied) to secure bell wire between receiver and opener. Length of bell wire depends on where the receiver will be installed. Replace actuator cover.

Choose a 120Vac polarized outlet for the receiver which is **OUT OF THE REACH OF CHILDREN**. Plug receiver into selected outlet. Return power to the opener.

The receiver and remote control(s) have been factory preset with a matching code. **THE REMOTE(S) OPERATES FROM THE LARGE PUSH BUTTON.** You can activate your opener with as many as four "SMART" remotes and one Touch Code remote.

If you purchase additional remote control transmitters to operate this receiver:

- 1) Remove the receiver actuator cover.
- 2) Press and HOLD the selected remote push button (Illustration A).
- 3) Then press the "SMART" actuator on the receiver (Illustration B). The adjacent indicator light will FLASH. Release the remote control push button.

 
The opener will now operate when either the receiver actuator or the remote control push button is pressed.

NOTICE TO U. S. CONSUMERS:

Some states prohibit the service or repair of garage door openers which cannot be made to comply with the safety standards contained in UL 325 (either the 1988 or 1992 revision). In order to comply with both the letter and the spirit of these laws, Chamberlain *strongly recommends* that this universal remote control not be used with any Chamberlain®, Lift-Master®, or Sears Craftsman® garage door opener manufactured prior to April 1, 1982, and that it not be used with *any* garage door opener within the state of New York. To find out if your Chamberlain-made garage door opener was manufactured prior to or after April 1, 1982, please call 1-800-528-9131 before installing this universal remote control.

RADIO CONTROLS consist of a receiver and remote control transmitter(s). The remote control sends a coded signal from outside the garage. Inside the garage, the plug-in receiver accepts the transmitted signal and starts the door opener.


IMPORTANT: Disable your existing receiver before installing this replacement unit. If this is not possible, locate receiver as far from original receiver as possible. When installing two or more receivers in a garage, position them at least 10 feet apart to prevent electronic interference.

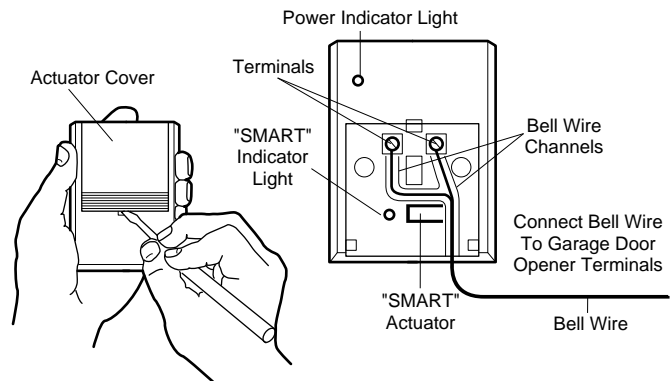


NOTE: If the remote control push button is not held down until the receiver indicator light flashes, the receiver will not learn the code.

To erase ALL remote codes from memory: Press and HOLD receiver "SMART" actuator. Indicator light alongside will glow. When the indicator light turns OFF (in about 6 seconds) ALL codes will be erased.

 A Single Function Remote Control

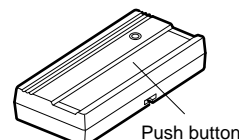

B Universal Receiver

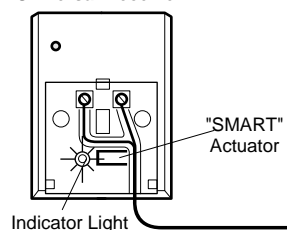 

REPLACEMENT PARTS: Remote Control housing only (no circuit board) - 41A3984-5; Visor clip - 29C128; Battery - 10A14; Universal Receiver (complete) - 41A4161-3; Receiver Actuator Cover - 41A3591