





**NORTH SHORE**  
COMMERCIAL DOOR.COM

## NSCD-390GIV4 Programming Guide

### 1. Important Information

Older Transmitters and Receivers (Before 1997) Are not compatible with this remote. There are no Security Code Switches inside the Door Operators, Transmitters, and Receivers.

! WARNING	
	<p><b>Moving Door Can cause serious injury or death.</b></p> <ul style="list-style-type: none"> <li>• <b>Do Not</b> install transmitter unless the door operator's <b>safety reverse</b> works as required by the door operator's manual.</li> <li>• Wall control must be mounted in sight of door, at least 5 feet above the floor and clear of moving door parts.</li> <li>• <b>Keep people clear</b> of opening while door is moving.</li> <li>• <b>Do Not</b> allow children to play with the transmitter or door operator.</li> </ul> <p>If <b>safety reverse</b> does not work properly:</p> <ul style="list-style-type: none"> <li>• <b>Close door then disconnect operator</b> using the manual release handle.</li> <li>• <b>Do Not</b> use transmitter or door operator.</li> <li>• Refer to Door and Door Operator Owner's Manuals before attempting any repairs.</li> </ul>
	<p><b>Electrical Shock can cause serious injury or death.</b></p> <ul style="list-style-type: none"> <li>• Power cord must be unplugged before attaching any wires.</li> <li>• Be sure wire ends do not touch each other or other terminals.</li> </ul> <p>Questions? Contact Local Distributer or Opener Manufacturer.</p>

### 2. To Program The Receiver

**Step 2-1** Locate the Learn Code Button and Radio Signal Indicator on the Power Head Receiver of your Door Operator.

**Step 2-2** Press and release the Learn Code Button (Figure 1)

- The Radio Signal Indicator will blink approximately 2 times per minute.

**Step 2-3** Press a Transmitter Button once within 30 seconds.

- The Radio Signal Indicator stays lit - **SOLID**.

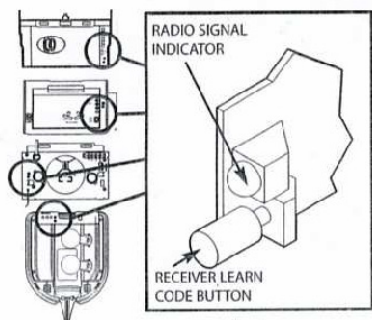


Fig. 1

**Step 2-4** Press the same Transmitter Button Within 30 seconds.

- Radio Signal Indicator will go out.

**NOTE:** If a second Transmitter Code is not confirmed within 30 seconds or if a different Transmitter Code is sent, the Radio Signal Indicator will blink approximately 4 times per second, then programming will stop. If programming stops, repeat Steps 2-2 through 2-4.

**Step 2-5** Repeat Steps 2-2 through Step 2-4 for each Transmitter, Wireless Keypad of other access device to be learned.

**Note:** A maximum of 7 Transmitter, Wireless Keypad, and other access device Codes can be stored into Receiver Memory at one time. If a Transmitter becomes lost or if you want to delete a Transmitter, Wireless Keypad, or other access device, proceed to Step 4. ERASING ALL RECEIVER MEMORY.

### 3. Multi-Button Transmitters

**NOTE:** Only ONE button of a Multi-Button Transmitter can be programmed into a single Receiver. The other buttons are to control other Door Operators.

**NOTE:** If you are replacing a lost or stolen Transmitter: (1) Erase ALL Transmitter Codes from the Receiver memory. (2) Reprogram the Receiver with the remaining Transmitter Codes.

### 4. Erasing All Receiver Memory

**Step 4-1** Press and HOLD the Learn Code Button for 120 seconds.

**ALL Transmitter Codes are erased from Receiver Memory**

**Step 4-2** Reprogram the Receiver with the remaining Transmitter Codes (Repeat Steps 2-2 through 2-4)

### 5. Battery/ Clip Installation

**Step 5-1** Battery Replacement:

- Flip to the back of the transmitter and locate screw above key ring. (Figure 2)
- Remove the screw from the back of the transmitter and pry apart.
- Using the tip of a phillips Head screw driver (Flat head) push the old battery out, and replace it with the new CR032 Lithium battery. (Figure 3)
- Reassemble the transmitter.
- To place transmitter in the clip, place transmitter at top of the cradle and slide down until snug.
- To remove from cradle, slide the transmitter up from the base of the cradle.

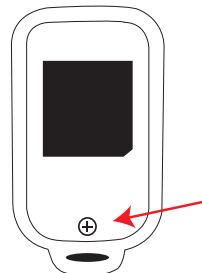


Figure 2

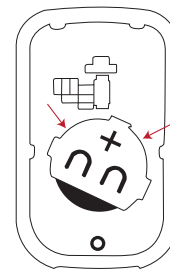


Figure 3

### 6. Transmitter Operation

- Point Transmitter at the garage door and press the button. The door will move.
- Press the Transmitter Button again and the door will stop.
- Press the Transmitter Button again and the door will move the other way: The door automatically stops at the end of the open or close cycle.

#### FCC and IC Certified

This device complies with FCC Part 15 and RSS 210 of Industry Canada. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

For additional information or help, see your Owner's Manual or contact North Shore Commercial Door at 800 783 6112 or visit [www.northsho-commercialdoor.com](http://www.northsho-commercialdoor.com).

162 Edgewood St.  
Elyria, Oh 44035

NSCD-390GIV4