

To Program an NGX remote to work with older Genie Intellicode I Garage Door Openers

Simply hold down the desired button until both the green and red LED lights come on, release the button, and then immediately push it again....still confused, read on...




All buttons come factory preset to transmit in dual frequency Intellicode II mode. To confirm that a button is set to this mode, press the desired button. A green LED light above the Genie logo indicates it is in dual frequency 390/315 mode. A red LED indicates it is in 390 Intellicode I mode. **To change modes:** Hold down any button until both LEDs come on (approximately 20 seconds). Release the button and then immediately push it again.

The red LED should now light when the button is pushed again indicating that it is now in the mode compatible with Intellicode I operators. To program the remote to the old machine, follow the instructions to program a regular remote to that machine.

To Program an older Intellicode I remote to work with a new NGX Operator

Simply use the same procedure you would use to program an NGX remote, but prior to hitting the desired button on the old Intellicode I remote, hit any button on a preprogrammed NGX remote....still confused, read on...

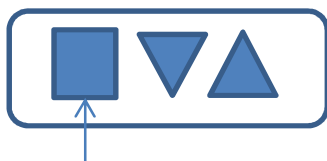

1. Hold square button on operator until lights come on. Release and then press again to enter transmitter programming mode.



2. Press any button that has previously been programmed to the operator.



3. Hit the desired button until the machine operates.