

M330-1KA RF Keypad

The RF Keypad can be used with any gate or garage door opener that uses our M294-k Or Multi-Code receiver inside the opener. The keypad will transmit one after you enter the correct numeric code. The keypad will NOT affect the auto close setting of your gate opener.

The keypad will shut down for approximately 40 seconds if your entry code is not correct within 4 tries.

Safety Note: NEVER install the keypad where a person can touch the gate while activating the keypad.

To program the keypad:

1. Install 4 AA batteries behind the faceplate. OR if hardwiring see instructions below.
2. Open the keypad to change the dip switches:
 1. You will see ten (10) Dip switches, each has 2-position setting (on/off)
 2. Set the dip switches to match that of your receiver, gate, or garage door opener.
3. Change the Master Code:
 1. Enter the default code 1234
 2. Press the programming button
 3. Enter 1
 4. Enter 00
 5. Enter your new 4 digit code
 6. Press the programming button
4. Program the user code (you can have up to 60 different user codes)
 1. Enter the MASTER code (you changed in step 3)
 2. Press the programming button
 3. Enter 1
 4. Enter 01 to enter your first code, and then assign a four-digit code.
 5. Press the programming button again. You are now complete with the first code. If you wish to install more codes simply press the programming button again enter 02 then another four digit code, etc.
5. Deleting a programmed user code:
 1. Enter your master code
 2. press the programming button
 3. Enter 2
 4. Enter the 4 digit user code you want to delete. i.e., 03 for third user code or 50 for fiftieth user code.
 5. Press the programming button again.

Hardwiring the Keypad:

1. Disconnect the RF transmitter by moving the jumper (TX Time) to J0.
2. Connect the accessories (e.g. electronic door lock & 12V power supply) to terminal blocks.
3. Adjusting RF transmitter-**May be necessary for SOME openers**
 1. Moving the jumper (TX Time) to:
 1. J0 to transmit 0 seconds
 2. J1 to transmit 1 seconds
 3. J2 to transmit 2 seconds
 4. J3 to transmit 3 seconds
 5. J4 to transmit 4 seconds

Multi-Color Status LED:

1. Orange – Lights when you press the keys
2. Red – Lights when the correct code is entered and transmitting
3. Red Blinking – batteries are low and need to be replaced
4. Green – you are in programming mode
5. Green Flashing 3 times – Error during programming

Return to DEFAULT SETTINGS:

1. Disconnect all batteries – **TAKE ALL POWER AWAY**
2. Depress 3,6,9 **AND** put the power back to the keypad **AT THE SAME TIME**
3. When you release the keys you will be back to factory setting with NO programmed codes.

