

To comply with FCC/IC rules, adjustment or modification of this receiver and/or transmitter is prohibited, except for changing the code setting or replacing the battery. THERE ARE NO OTHER USER SERVICEABLE PARTS.

The Plug-In Light Control is designed to operate lights according to the rating chart shown. Please read the instructions and power limitations carefully to ensure proper use and maximum safety. **NOT recommended for use with toasters, coffee pots, or halogen lighting systems.**

Light Control products can be operated by portable remote control Model Series 60 and 80, and by Model 66LM Keyless Entry.

The Plug-In Light Control receiver needs to learn the remote control code. Follow the instructions below:

- Select a remote control push button to operate the light control.
- Pry up the lower edge of the actuator with a coin or screwdriver as shown.
- Plug the light control into a 120 Vac polarized outlet. **The plug contacts are designed for polarized outlets only.** The green power indicator light will turn on if there is power to the outlet.
- Press and *hold* the remote control push button you chose to activate the light control.
- Then press and release the "SMART" button on the receiver with a pen or pencil tip. The adjacent green indicator light will FLASH once.
- Release the remote control push button. Code setting is now complete. Snap actuator back on light control.

If the remote control push button is not held down until the receiver indicator light flashes, the light control has not accepted the remote's code.

*If the receiver "SMART" button is pressed and held until the green indicator light alongside goes out (in about 6 seconds), **all memorized codes will be erased.***

 
 
RATING

Resistive Load1200 Watts
Motor Load.....1/3 HP
Incandescent Lamp600 Watts




WARNING

The Light Control is for indoor use only. Exposure to moisture can cause electric shock or fire. Unplug receiver before opening cover to set/change code.

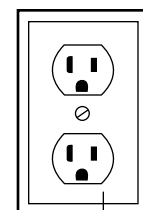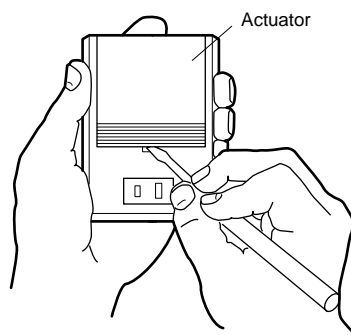


Power Indicator Light
120VAC Polarized Wall Outlet

 Representative Remote Control

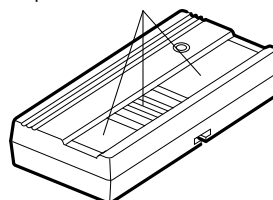

 Select a Remote Control push button to operate the light control

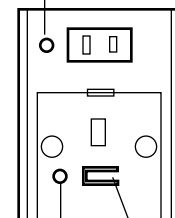

Green Indicator Light
"SMART" Button

OPERATING INSTRUCTIONS

- First, plug the lamp into a *wall* outlet and turn it ON.
- With the lamp still in the ON position, plug it into polarized outlet on the light control. The bulb will *not* light.
- TO TEST: Press and release the light control actuator. The light should turn ON. Press the remote control push button. The light should turn OFF.

If two or more light products are installed, the receivers must be located at least 10 feet apart to prevent electronic interference.

If the remote control does not activate the light, check to be sure:

- You are pressing the remote control push button selected to operate the light control.
- The remote control battery has power. *The test light on the remote control should glow when the push button is pressed. Refer to the remote control instructions for battery changing information.*

SERVICE INFORMATION TOLL FREE NUMBER: 1-800-528-9131