

Lift-Master™

The Professional Line

To comply with FCC/IC rules, adjustment or modification of receiver and/or transmitter is prohibited, except for changing the code setting and replacing the transmitter battery. THERE ARE NO USER SERVICEABLE PARTS.



WARNING


Disconnect power to the garage door or gate opener before installing the receiver.

Children operating or playing with a garage door or gate opener can injure themselves and others. *The garage door or gate could close and cause serious injury or death.* Do not allow children to operate the push buttons or the remote control transmitters.

Install the receiver (and any additional push buttons) out of the reach of children and away from all moving parts of the door or gate and its hardware, but *where the garage door or gate is visible.*

A moving garage door or gate could injure someone under it. Activate the opener only when the door or gate is properly adjusted, you can see it clearly, and there are no obstructions to door or gate travel.

Access Control Receiver ACRx Model 1000 OWNERS MANUAL

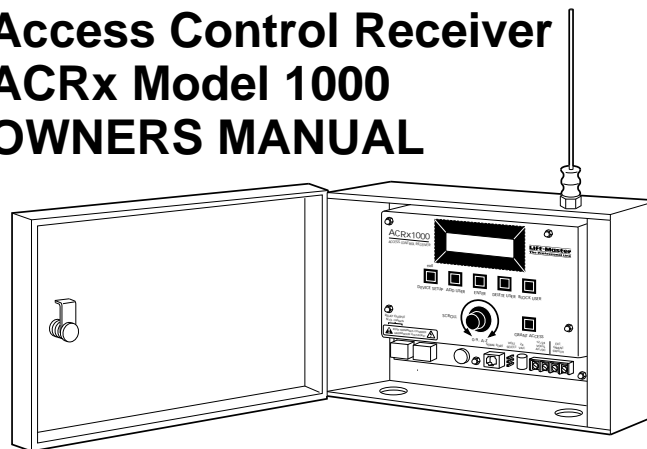

WARNING

Install the control station and receiver where the door or gate is visible, but away from the door or gate and its hardware. When a receiver is used to activate a commercial door opener, a reversing edge **MUST** be installed on the bottom of the door. *Failure to install a reversing edge under these circumstances may result in serious injury or death to persons trapped beneath the door.*

FEATURES

Code Memory	1000 users with unique radio codes (any combination of 60 Series remote controls, 80 Series remote controls, 66LM keypad remote control, or 99LM keypad remote control codes). Each radio code can have a 5 digit alpha-numeric user name assigned to it. Users can be individually added, deleted or blocked.
Input/Output Connections	Terminal block inside case. Two screws each for power, relay output, and command.
Power Supply	24 V AC/DC or 12 V DC.
Output Control Circuit	Relay switching controlled by radio transmitters, or GRANT ACCESS button on control panel, or external push-button.
Output Control Rating	Relay Switches Up to 3 Amps at 37 VAC max.
Case	The ACRx is mounted in an 8" x 10" x 3" metal box, with an integrated hinged lid. All electrical connections can be made through a conduit hole; a type-F connector is available externally for antenna mounting. Keylock provided for securing panel against undesired entry.
Display	16 Character non-backlit, LCD display
Time Clock	Time and date are maintained by a real time clock with battery backup. Expected battery life is 10 years.
RS-232 Interface	An RS-232 interface is provided. This interface is 1200-9600 Baud, 8 bits, no parity, 1 stop bit. This allows use of a computer or printer to record access transactions. This interface can also be used to back up code memory to a computer with the use of Microsoft Windows-compatible software available from Lift-Master.

INTRODUCTION

The ACRx is a radio receiver which controls a gate or door opener. It can recognize as many as 1,000 different transmitters. It assigns a unique identification code to the user of each transmitter, and can produce a record of when each one is used to gain access. The ACRx can be easily programmed by any authorized person to add new users, remove users, suspend users temporarily, or open the gate or door by pushing one button. It can be connected to a computer for additional control and recordkeeping functions.

Mechanical and electrical installation must be performed by qualified, professional service personnel. Once the ACRx is installed, it may be programmed by the installer or by the custodian of the gate. The same procedures are used to make changes at a later time.

INSTALLATION

Installation should be performed by qualified persons. Knowledge of electrical codes may be necessary when wiring AC power and certain door actuators. If in doubt, consult with Lift-Master service at 1-800-528-6563.

Mounting the Box

Choose a location for the ACRx 1000 control box which is:

- Protected from tampering
- As close to the approaching vehicles as possible for best reception.
- Protected from moisture.
- Suitable for permanent attachment by mounting screws.
- Accessible to necessary wiring.

Hold the ACRx control box in its intended mounting location. Make sure the cover opens freely, with the display and controls at a comfortable height and angle for viewing and use. Use the holes in the ACRx box for marking and drilling attachment holes.




Wiring requirements

Power can be provided with an 85LM wall mount transformer or Radio Power from a gate operator (17 to 37 V AC/DC at 150 mA or 12 VDC at 200 mA minimum.)

Using an 85LM wall mount transformer: Install the voltage select jumper in 24V position and plug transformer jack into receptacle to the right of the voltage jumper. Wire the relay contacts to Push Button and Common as shown in diagram.

Using gate/door operator power: Install the voltage select jumper in the position that matches the power supplied by the operator. Wire to the operator as shown in diagram.

Connect the wiring according to the diagram. Be sure to protect any wires from tampering; access to the wires will allow access to the gate.

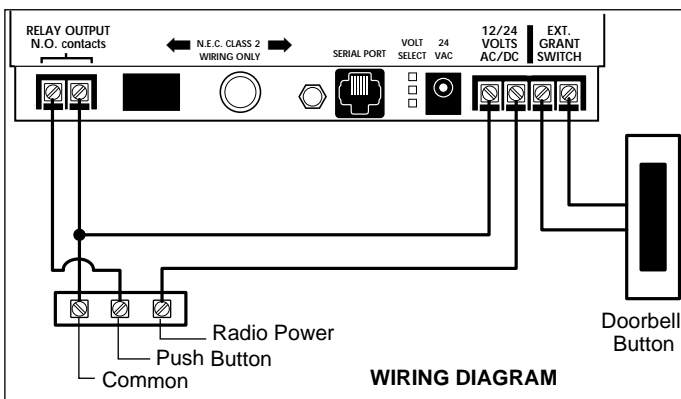

Antenna Placement

For best range, placement of the antenna is crucial. Follow these guidelines for best results. If necessary use the 86LM antenna extension kit to give more flexibility.

- The antenna must not be next to, or enclosed in, metal.
- Place the antenna outside of any housing, box, or building, even those not made of metal, if possible.
- Place the antenna as high as possible.
- Keep the antenna as far as possible from conduit, electrical machinery, and other radio devices.
- Consider the direction from which the transmitters will be used. Place the antenna so there are no structures or metal obstructions between the transmitters and the receiving antenna.

OPERATION

The controls and display on the ACRx panel are very simple for ease of operation. Most programming tasks require pushing one button for the desired operation, then completing the displayed instructions. A summary of these procedures is printed inside the ACRx panel door.

Before use, each transmitter must be programmed into the system by the *Add Users* function. This “learns” the unique radio code of that transmitter, and assigns it a User ID code chosen by the programmer; this User ID may be the user’s name, unit number, or any combination up to five letters and numbers. Once programmed, the transmitter can be used to control access. The ACRx can output the date, time, and User ID for each access. User IDs can be *Deleted* when no longer allowed, or *Blocked* from access temporarily. A *Setup* function is used to set the time, date, and other details of ACRx operation.

Setup

Basic settings on the ACRx are changed through the *Setup* routine. These include the time, date, and other optional settings. To change any of the following items, press the SETUP/EXIT button. The message “scroll for MENU” will appear; turn the dial to choose the item that you want to change, then press the ENTER button.

If you wish to leave the *Setup* mode without doing anything, press SETUP/EXIT again to return to the regular display, which shows the date and time alternately.

Change PASSWORD: A password may be used to protect the ACRx against unauthorized access. The unit is shipped with the *Password* function disabled. To enable this feature, select a four digit password composed of letters and/or numbers. Once a password has been entered no changes can be made to the ACRx memory without supplying the password. ***If you forget your password, it cannot be retrieved.***

To disable the *Password* function, change the password to all spaces.

Set the TIME: When “Set the TIME” is displayed and you press ENTER, the current time will be displayed in hour/minute/second/AM-PM format. The first digit will be underlined. Turn the dial until that digit is set, then press ENTER. Repeat until all digits are correct. Press ENTER one more time and the time is set. “Set the TIME” will be displayed again. Press SETUP/EXIT to return to the regular display.

Set the DATE: When “Set the DATE” is displayed and you press ENTER, the current date will be displayed in month/day/year format. The first digit will be underlined. Turn the dial until that digit is set, then press ENTER. Repeat until all digits are correct. Press ENTER one more time and the date is set. “Set the DATE” will be displayed again. Press SETUP/EXIT to return to the regular display.

Set RELAY Mode: The method of relay operation depends on the type of gate or door opener the ACRx is controlling. The three types of operating modes are described as follows:

- **Momentary Close:** The relay contacts will close for 1/3 seconds each time a valid user’s transmitter code is received. This is the factory default state of the ACRx, and the most commonly used.
- **On When Receiving:** The relay contacts will close when a valid transmitter code is received, and remain closed until the user releases his transmitter button.
- **Toggle ON/OFF:** The relay contacts will close when a valid transmitter code is received, and remain closed until the next one is received. The relay will continue to toggle ON/OFF in this manner for each valid code received. This mode is useful when the relay must stay on after the user releases his transmitter button.

Add User

Each 80 series “Billion Code” transmitter is uniquely coded at the factory; no two transmitters have the same code. When adding a user there is no need to program the transmitter or set code switches. If using 60 series (or older) transmitters, each transmitter should have a different code setting.

Press the ADD USER button to choose the *Add User* mode. The display will show “USER ID = ____”. Turn the dial until the first letter of the desired User ID is shown, then press ENTER. Repeat until all the letters or numbers (up to five) are displayed. Press ENTER twice to confirm that User ID.

Instead of selecting a custom User ID yourself, the ACRx can choose a number for you. Simply press ENTER 5 times when “USER ID _” is displayed (enter a User ID of all blanks), and the next ID number in sequence will be automatically assigned. This will be a numerical only ID.

The display will now show “TRANSMIT NOW!” and the green light next to the display will stay on. Press the button on the transmitter for that User ID. The display will show “Add User COMPLETE”. That transmitter is now an authorized user; when pressed, it will grant access for that User ID.

If there is a mistake or a problem at any time, press SETUP/EXIT to start over. These steps can be repeated to add more users.

Delete User

Press the DELETE USER button. The display will show “USER ID = ____”. Turn the knob until the first letter of the User ID is shown, then press ENTER. Repeat until the entire User ID is displayed.

The display will show “DELETE <USER ID>?” Press ENTER to delete that User ID, or EXIT to cancel and start over.

After ENTER is pressed, the display will flash “Del Usr COMPLETE”. When a User ID is deleted, the ACRx will no longer respond to that transmitter and all record of that user is deleted from the ACRx.

Block and Unblock Users

Press the BLOCK USER button. The display will show “USER ID = ____”. Turn the knob until the first letter of the User ID is shown, then press ENTER. Repeat until the entire User ID is displayed.

The display will show “BLOCK <USER ID>?” Press ENTER to temporarily block that User ID, or EXIT to cancel and start over.

When a User ID is blocked, the ACRx will display the attempted entry as “BLOCKED:____”, and will not open the gate. Time and date of the attempted entry is available at the computer serial port.

To unblock a user, press the BLOCK USER button and repeat the steps used to choose the User ID. The display will show “UNBLOCK <USER ID>?” Press ENTER to unblock that user, or EXIT to cancel and leave the user blocked.

TRANSMITTER/WIRELESS OPERATION

Whenever the ACRx is displaying the date and time, it is ready to respond to a transmitter. If a transmitter button is pushed, the green light next to the display will flash. If the code matches a valid User ID which is not blocked, access will be granted and the display will show “Access OK: <User ID>”. If the code matches a blocked User ID, access will not be granted and the display will show “Blocked: <User ID>”.

MANUAL OPERATION

The gate or door can be manually operated by pressing the GRANT ACCESS button on the panel, or by closing any contacts connected to the External Grant Switch terminals. If Operator *Password* is enabled, the ACRx will ask for the correct 4-digit password before closing the contacts.

SERIAL PORT

The ACRx includes a computer connection which can be used to attach a computer or printer. This is a standard RS-232 serial port, although a special adapter cable is required to connect to the ACRx.

When attached to a serial interface computer printer, the ACRx will print a log of all activities as they occur. Line messages include:

“*self-test PASSED at <time/date>*”. This is printed when the ACRx is turned on or reset.

“*Access OK: <User ID> at <time/date>*”. This prints each time a valid transmitter code is received and access is granted. The User ID of the transmitter and the date and time of access are recorded. (Transmitter digital code is **not** printed.)


“Blocked: <User ID> at <time/date>”. This prints each time a transmitter code is received which is blocked. Access is not granted. The User ID of the transmitter and the date and time of the attempt are recorded.

(In all these cases the date and time recorded depend upon the date and time being correctly set in the ACRx. To change the date or time, refer to the **Setup** section of these instructions.)

When attached to a serial interface port of an MS-DOS computer equipped with Microsoft Windows® and LiftMaster’s own Total Control software, the ACRx can be remotely programmed and activity recorded. For more information about this feature, call your local Lift-Master dealer.

COMPATIBLE PRINTERS

The ACRx 1000 is compatible only with standard RS-232 line printers.

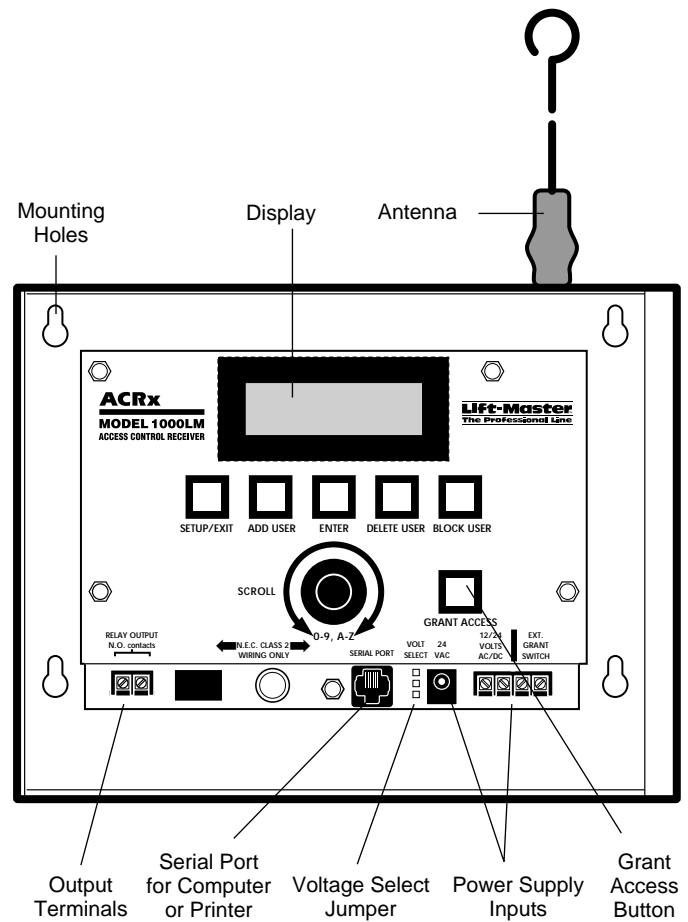

TROUBLESHOOTING

Problem	Remedy
LCD display is blank.	<ul style="list-style-type: none"> Power not connected; check plug and wires. ACRx is broken; repair or replace.
LCD display is on but ACRx does not function properly.	<ul style="list-style-type: none"> Turn power off, then on again. Check 24V/12V jumper.
All users have short radio range, green light is flashing.	<ul style="list-style-type: none"> A transmitter is stuck on. Use M-18 test set to locate and disable transmitter.
All users have short radio range, green light is off.	<ul style="list-style-type: none"> Radio interference; try moving antenna location.
A single user has short radio range.	<ul style="list-style-type: none"> Replace transmitter battery, or move transmitter to a different place in car.
A single user cannot obtain access. Green light on ACRx flashes, LCD message does not change.	<ul style="list-style-type: none"> Repeat the <i>Add User</i> routine.
A single user cannot obtain access. Green light on ACRx does not flash.	<ul style="list-style-type: none"> Replace transmitter battery, or replace and reprogram transmitter.
When Grant Access button is pushed, ACRx relay clicks but door/gate does not open.	<ul style="list-style-type: none"> Check door operator and wiring.
ACRx prints incorrect time/date.	<ul style="list-style-type: none"> Time or date is wrong. Do <i>Set Time</i> or <i>Set Date</i> routine. Clock backup battery needs replacement.
No users can access ACRx, LCD display is on.	<ul style="list-style-type: none"> ACRx must be in the idle state, with time and date displayed. Press SETUP/EXIT, or cycle power to ACRx.

SERVICE INFORMATION TOLL FREE NUMBER: 1-800-528-9131

Access Control Receiver Operating Instructions

The controls and display on the ACRx panel are very simple for ease of operation. Most programming tasks require pushing one button for the desired operation, then completing the displayed instructions.

Before use, each transmitter must be programmed into the system by the Add Users function. This "learns" the unique radio code of that transmitter, and assigns it a User ID code. This User ID may be the user's name, unit number, or any combination up to five letters and numbers. Once programmed, the transmitter can be used to control access. The ACRx records the date, time, and User ID for each access. User IDs can be Deleted when no longer allowed, or Blocked from access temporarily. A Setup function is used to set the time, date, and other details of ACRx operation.

SETUP

Basic settings on the ACRx are changed through the Setup routine. These include the time, date, and other optional settings. To change any of the following items, press the SETUP/EXIT button. The message "scroll for MENU" will appear; turn the dial to choose the item that you want to change, then press the ENTER button.

If you wish to leave the Setup mode without doing anything, press SETUP/EXIT again to return to the regular display, which shows the date and time alternately.

Set the TIME: When "Set the TIME" is displayed and you press ENTER, the current time will be displayed in

hour/minute/second/AM-PM format. The first digit will be underlined. Turn the dial until that digit is set, then press ENTER. Repeat until all digits are correct. Press ENTER once more and the time is set. "Set the TIME" will be displayed again. Press SETUP/EXIT to return to the regular display.

Set the DATE: When "Set the DATE" is displayed and you press ENTER, the current date will be displayed in month/day/year format. The first digit will be underlined. Turn the dial until that digit is set, then press ENTER. Repeat until all digits are correct. Press ENTER once more and the date is set. "Set the DATE" will be displayed again. Press SETUP/EXIT to return to the regular display.

ADD USER

Each 80 series "Billion Code" transmitter is uniquely coded at the factory; when adding a user there is no need to program the transmitter or set code switches. If using 60 series (or older) DIP switch transmitters, each transmitter should have a different code setting.

Press the ADD USER button to choose the Add User mode. The display will show "USER ID = _". Turn the dial until the first letter of the desired User ID is shown, then press ENTER. Repeat until all the letters or numbers (up to five) are displayed. Press ENTER twice to confirm that User ID.

Instead of selecting a custom User ID, the ACRx can choose a number. Simply press ENTER 5 times when "USER ID _" is displayed (enter a User ID of all blanks), and the next

ID number in sequence will be automatically assigned.

The display will show "TRANSMIT NOW!" and the green light next to the display will stay on. Press the button on the transmitter for that User ID. The display will show "Add User COMPLETE". That transmitter is now an authorized user; when pressed, it will grant access for that User ID.

If there is a mistake or a problem at any time, press SETUP/EXIT to start over.

DELETE USER

Press the DELETE USER button. The display will show "USER ID = _". Turn the knob until the first letter of the User ID is shown, then press ENTER. Repeat until the entire User ID is displayed.

The display will show "DELETE <USER ID>?" Press ENTER to delete that User ID, or EXIT to cancel and start over. After ENTER is pressed, the display will flash "Del Usr COMPLETE". When a User ID is deleted, the ACRx will no longer respond to that transmitter and all



WARNING

Disconnect power to the door or gate opener before installing receiver. Failure to follow this warning could result in electrical shock or fire, and damage to the ACRx.

INSTALLED BY: