

## PARTS AND SERVICE

For parts and service, contact the nearest Distributor. When ordering parts, please specify:

MODEL NUMBER  
PART NUMBER  
PART DESCRIPTION

Repair to transmitter and receiver should be performed by a qualified repairperson. Call 1-800-275-6187.

## PROGRAMMABLE TRANSMITTER



OPERATOR DIVISION  
22790 LAKE PARK BLVD.  
ALLIANCE, OHIO 44601-3498



P/N 109126-0003



## WARNING



**Moving Door can cause serious injury or death.**

- Do **Not** install remote unless the door operator's safety reverse works as required by the door operator's manual.
- Wall control must be mounted in sight of door, at least 5 feet above floor and clear of moving door parts.
- Keep people clear of opening while door is moving.
- Do **Not** allow children to play with the transmitter or door operator.

**If safety reverse does not work properly:**

- Disconnect operator using the manual release handle.
- Do **Not** use transmitter or door operator.
- Refer to Door and Door Operator Owner's Manuals before attempting any repairs.



**Electrical Shock can cause serious injury or death.**

- Power cord must be unplugged before attaching any wires.
- Be sure wire ends do not touch each other or other terminals.

If you have questions or if you need a manual, contact the distributor or manufacturer of the operator.

P/N 109126-0003

 
3/01/96

## OPEN THE CASE

Remove visor clip by pulling it back out of the groove. Remove the exposed screw. Squeeze the upper housing half at the grooved area separate from the lower housing.

## SETTING THE CODE SWITCHES

The code switches are located on the end opposite the battery. Note that each of the nine switches has three positions.

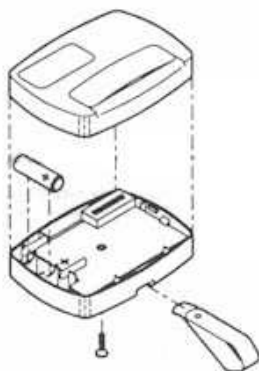


This device complies with FCC rules Part 15. Operation of this device is subject to the following two conditions:



1. This device may not cause harmful interference.
2. This device must accept any interference, that may be received, including interferences that may cause undesired operation.

## SETTING THE TRANSMITTER SECURITY CODE SWITCHES

 Transmitters have assigned channels per button as shown.

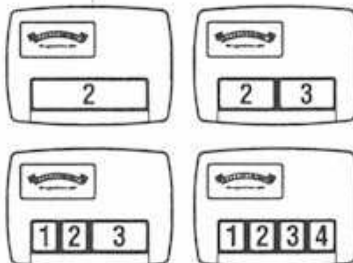

  Set switches 1 through 9 at any security code, press and hold desired channel. Now press learn. The green LED will flash indicating the channel is stored. One flash is for channel one, two for channel two, three for channel three, and four for channel four. The transmitter has now stored the code in the corresponding channel until the learn switch is pressed again.

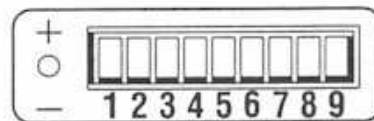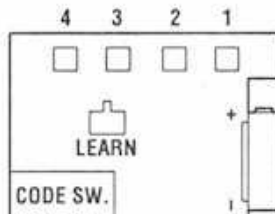

Available for code setting.

## SETTING THE RECEIVER SECURITY CODE

### RECEIVERS OR OPERATORS WITHOUT CODE SWITCHES

Program the desired button to the control device as stated in the Receiver or operator owners manual.

### RECEIVERS OR OPERATORS WITH CODE SWITCHES

Set switches 1 through 9 in each receiver or operator in the exact positions as switches 1 through 9 were set on that particular channel when the codes were stored in the transmitter.

CHANNEL #1	
CHANNEL #2	
CHANNEL #3	
CHANNEL #4	