





Quick Set-up Guide

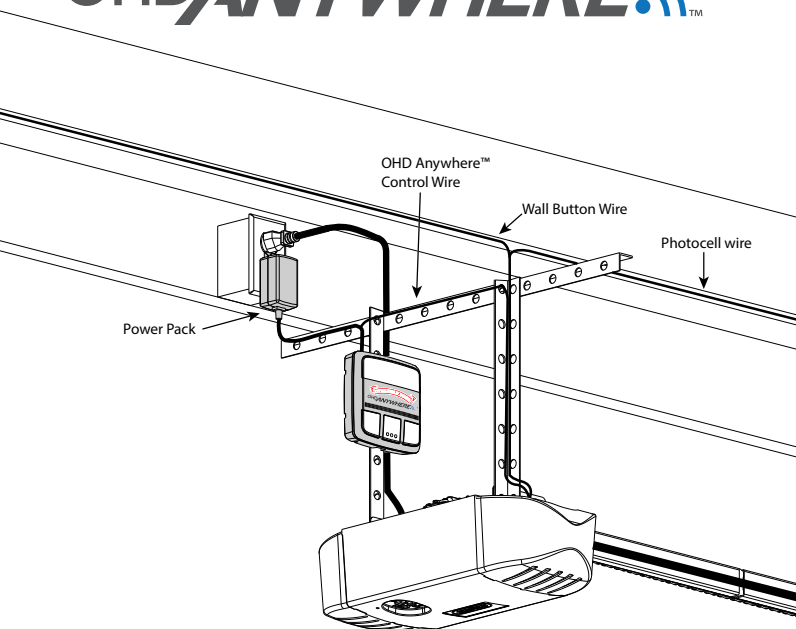

Recommended Tools

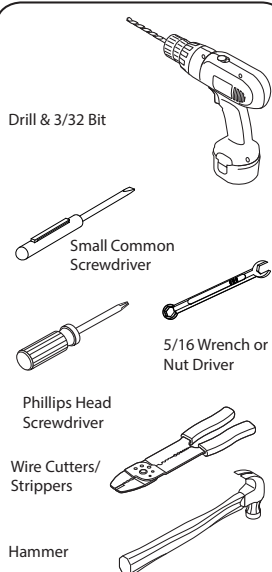

Included Components



For a video of this installation,
Visit www.OverheadDoor.com/OHDAnywhere/InstallationVideo

IMPORTANT SAFETY INSTRUCTIONS WARNING TO REDUCE THE RISK OF SEVERE INJURY OR DEATH, READ AND FOLLOW ALL INSTRUCTIONS. 1. NEVER let children operate or play with the door controls. 2. Keep remote away from children. 3. Locate the wall control button & DCM: A) Within sight of door. B) At a minimum height of 5 feet, so small children cannot reach it. 4. Install the entrapment WARNING label next to the wall button or console, in a prominent location. 5. NO ONE SHOULD CROSS THE PATH OF THE MOVING DOOR. 6. NEVER GO UNDER A STOPPED, PARTIALLY OPEN DOOR. 7. The OHD Anywhere™ operating system is designed for unattended operation. The door could move unexpectedly. 8. DO NOT install OHD Anywhere™ on garage door openers manufactured prior to 1993 without photocell non-contact safety sensors. 9. DO NOT install on one-piece doors 10. Install DCM in a location where it can be seen and heard while standing in the door opening with the door in the open position. SAVE THESE INSTRUCTIONS


CONSIGNES DE SÉCURITÉ IMPORTANTES AVERTISSEMENT POUR RÉDUIRE LE RISQUE DE BLESSURES GRAVES VOIRE MORTELLES, LIRE ET COMPRENDRE TOUTES LES INSTRUCTIONS. 1. NE JAMAIS laisser les enfants utiliser ou jouer avec les commandes de l'ouvre-porte. 2. Tenir les télécommandes hors de la portée des enfants. 3. Localiser le bouton de la console murale (DCM) : A) En vue de la porte. B) À une hauteur minimale de 1,5 m afin que les jeunes enfants ne puissent pas l'atteindre. 4. Placer l'étiquette d'AVERTISSEMENT en cas de coinçage à proximité du bouton mural ou de la console murale de manière à ce qu'elle soit bien en évidence. 5. NE JAMAIS PASSER SOUS LA PORTE EN MOUVEMENT. 6. NE JAMAIS PASSER SOUS UNE PORTE À L'ARRÊT PARTIELLEMENT OUVERTE. 7. Le système d'exploitation OHD Anywhere™ a été conçu pour fonctionner sans surveillance. La porte peut se déplacer de façon inattendue. 8. NE PAS installer OHD Anywhere™ sur les ouvre-portes de garage fabriqués avant 1993, sans capteurs de sécurité photoélectrique sans contact. 9. NE PAS installer sur les portes d'une seule pièce. 10. Installez DCM dans un endroit où il peut être vu et entendu tout en se tenant dans l'ouverture de la porte avec la porte en position ouverte. CONSERVER CES INSTRUCTIONS

WARNING UNPLUG GARAGE DOOR OPENER PRIOR TO INSTALLING OHD Anywhere™ Door may operate unexpectedly.
AVERTISSEMENT DÉBRANCHER L'OUVRE-PORTE DE GARAGE AVANT D'INSTALLER OHD Anywhere™ La porte peut fonctionner de façon inattendue.

STEP 1

In the Home close to Wi-Fi Router:

1. Remove mounting bracket from back of DCM. FIG.A,
2. Plug OHD Anywhere™ into wall outlet with Power Pack. FIG. B.
3. Plug power pack into DCM controller.

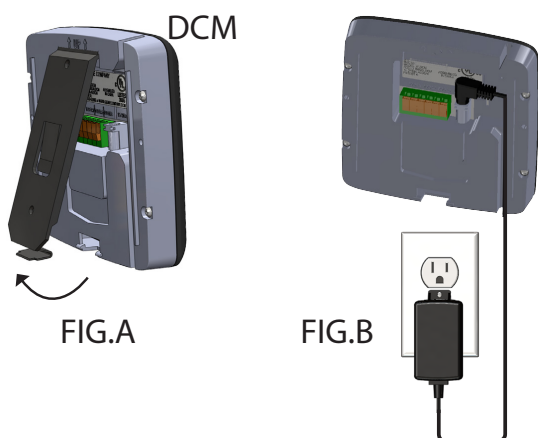


NOTE: Customers using control apps from other vendors and NOT using the OHD Anywhere™ app to control this system will need to visit www.OverheadDoor.com/OHDAnywhere for specific Wi-Fi instructions.

STEP 2

In the Home close to Wi-Fi Router:

Download the OHD Anywhere™ app.

 1. Scan the QR code below or visit www.OverheadDoor.com/OHDAnywhere to start the setup of the OHD Anywhere™ device.
2. Follow the on-screen menus to create an account and program system prior to wiring in the garage.
3. At the installation prompt, disconnect power pack and move system to the garage.



Installation Prompt

Scan for app.



Apple and the Apple logo are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc.

STEP 3

In the Garage:

These factors must be determined prior to mounting OHD Anywhere™ (DCM) to the wall or ceiling.

1. Optimal Wi-Fi signal strength.

- If an optimal signal cannot be located within the garage, move the wireless router closer to the garage or install a Wi-Fi range extender (available from most electronic stores)


2. Desired DCM location.

3. Access to 110VAC outlet within 5 feet.

1. Plug Power Pack into wall outlet and DCM near the chosen mounting location.

The Wi-Fi signal indicator LED should illuminate signaling that the Wi-Fi signal is still in tact.

- A **GREEN** LED indicates a good Wi-Fi signal.
 - A **YELLOW** LED, indicates a weak signal. Move OHD Anywhere™ to a position that better suits the Wi-Fi signal from the router.
 - A **RED** LED, indicates a lost or faulty signal. Move OHD Anywhere™ to a position that better suits the Wi-Fi signal from the router. Contact Customer Service for further assistance. (1-888-901-2750)
2. Once an **optimal** signal and location is obtained, **UNPLUG POWER PACK** from the DCM and continue to **STEP 4**.

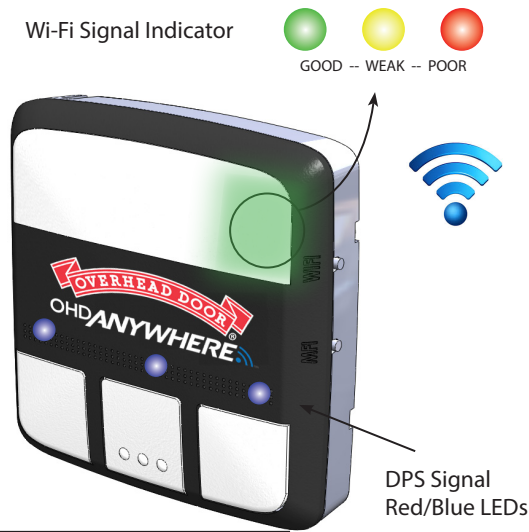

WARNING

**UNPLUG GARAGE DOOR OPENER PRIOR TO INSTALLING
OHD Anywhere™
Door may operate unexpectedly.**

AVERTISSEMENT

**DÉBRANCHER L'OUVRE-PORTE DE GARAGE AVANT
D'INSTALLER OHD Anywhere™
La porte peut fonctionner de façon inattendue.**

STEP 4



Wire OHD Anywhere™: (Single door install shown)

OHD Anywhere™ will wire directly to the wall control connections at the powerhead or directly to the wall control. New Genie models shown.

Visit www.OverheadDoor.com/OHDAnywhere for more information on older models and other brands of garage door openers.

1. Make sure garage door opener is unplugged.
 - Leave wire spool intact for this part of the install.
2. Split provided dual strand wire approximately 2 in. then strip 1/2 in. of insulation. FIG. A.
3. Press orange tabs down and insert both wires into connection points for DOOR 1 on the back of the DCM. FIG. B.
4. Trim and split the other end of the dual strand wire approximately 2 in. and then strip 1/2 in. of insulation. FIG. A.
5. Insert wire into wall control inputs either:
 - (OPTION A) Directly to the garage door opener.
 - OR
 - (OPTION B) To the Back of the wall control.

Button & Connection Detail

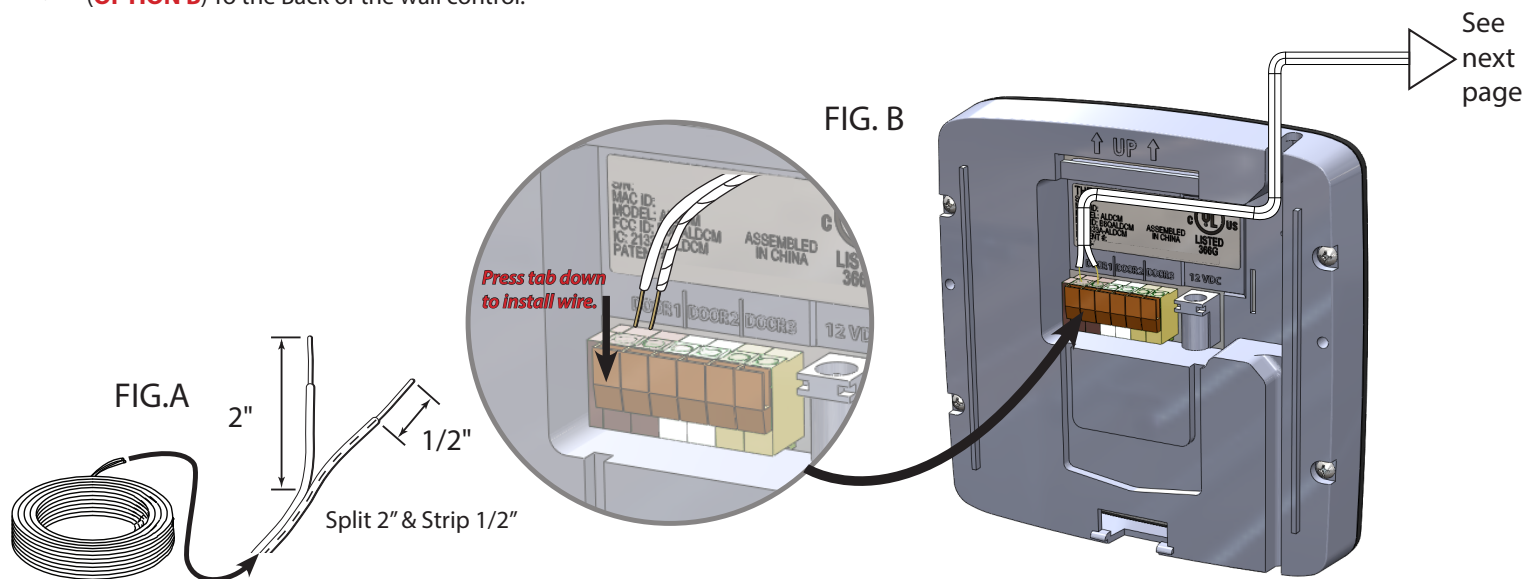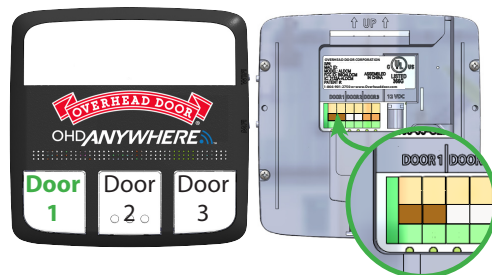


STEP 4

Wire OHD Anywhere™: (Continued)

Current model Overhead Door Brand opener shown. *See note for other models and brands.

OPTION A

Wire DCM Directly to
Garage Door Opener

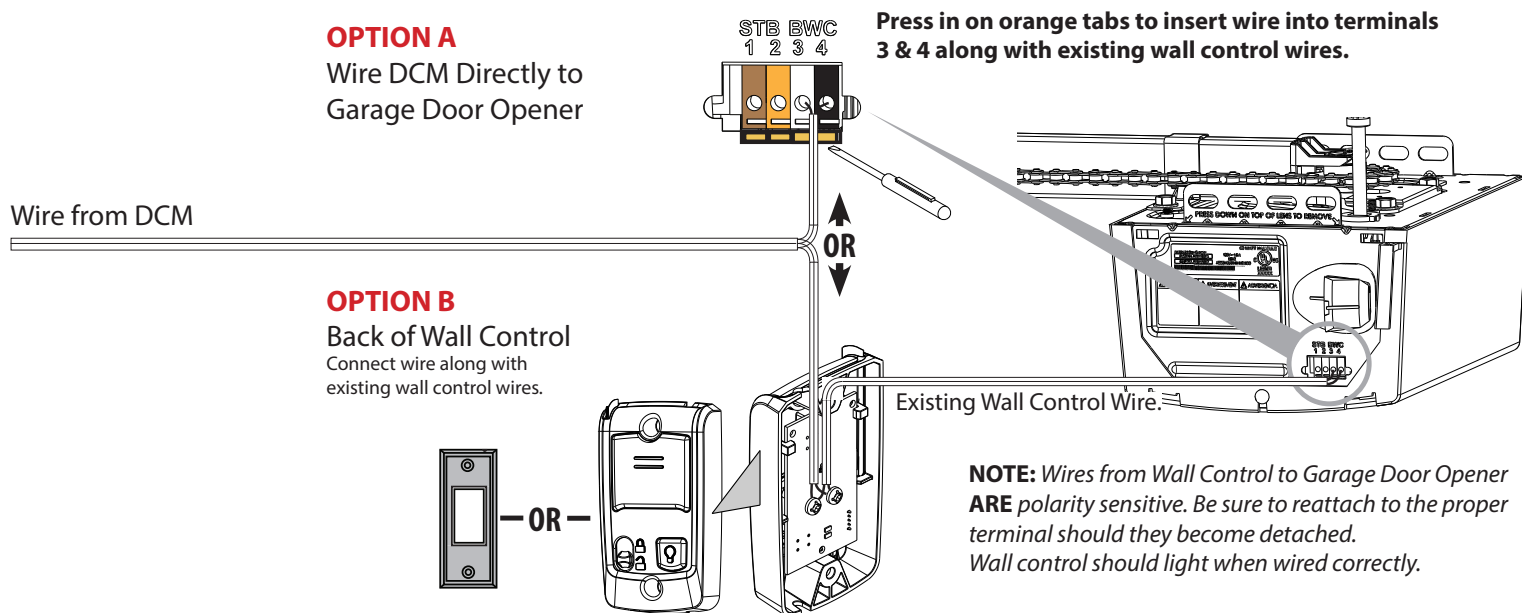

*Wiring methods for other garage door openers.

All Overhead Door brand and most competitor brands of garage door openers will operate with OHD Anywhere™. Visit www.OverheadDoor.com/OHDAnywhere for detailed wire diagrams or to check compatibility with other manufacturer's controls or check your garage door opener's owners manual for wall control wiring instructions. OHD Anywhere™ will operate up to 3 garage door openers.

STEP 5


Mount and Power Aladdin Connect™:

1. Using the DCM mounting bracket as a template at the optimal Wi-Fi location. Mark and drill 2-3/32" pilot holes and mount bracket to wall using supplied screws. If mounting to drywall, use anchors provided in kit or if mounting to perforated angle at opener location, use nuts, washers and screws provided.
2. Plug power pack into wall outlet. An extended screw is provided to secure power pack to outlet if needed.
3. Plug power pack into back of DCM as shown in **STEP 1**.


NOTE: LEDs on DCM will flash momentarily as it reacquires signals.

4. Snap DCM onto mounting bracket.
5. Route wires and secure with supplied staples.
6. Affix the warning placard next to wall control or DCM in plain sight to signify that the door will operate remotely.


1 Wall Mount
Anchors (as needed)

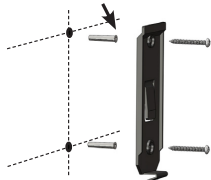

Perforated Angle
Mount

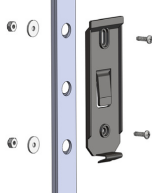

2-4

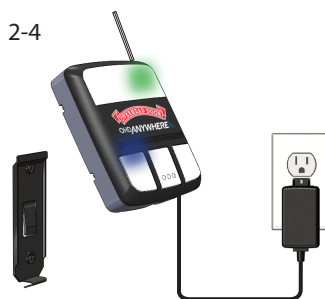

6



STEP 6


Mount DPS Module to Garage Door:

The DPS should be mounted on the **TOP door panel** only. Mount to steel reinforced end stile on the far left or right under the top hinge. **DO NOT** mount to unreinforced door panel.

1. Clean door where DPS will mount.
2. Install double sided tape to back of mounting bracket and affix to door.

NOTE: Double sided tape is designed to hold bracket in place temporarily only. Not to be used for permanent mounting.

3. Pre-drill 2 - 3/32 holes. **DO NOT** drill all the way through door.
4. Use included self tapping screws to mount DPS bracket to top door panel end stile.
5. Slide DPS down onto mounting bracket. DPS should snap onto bracket.

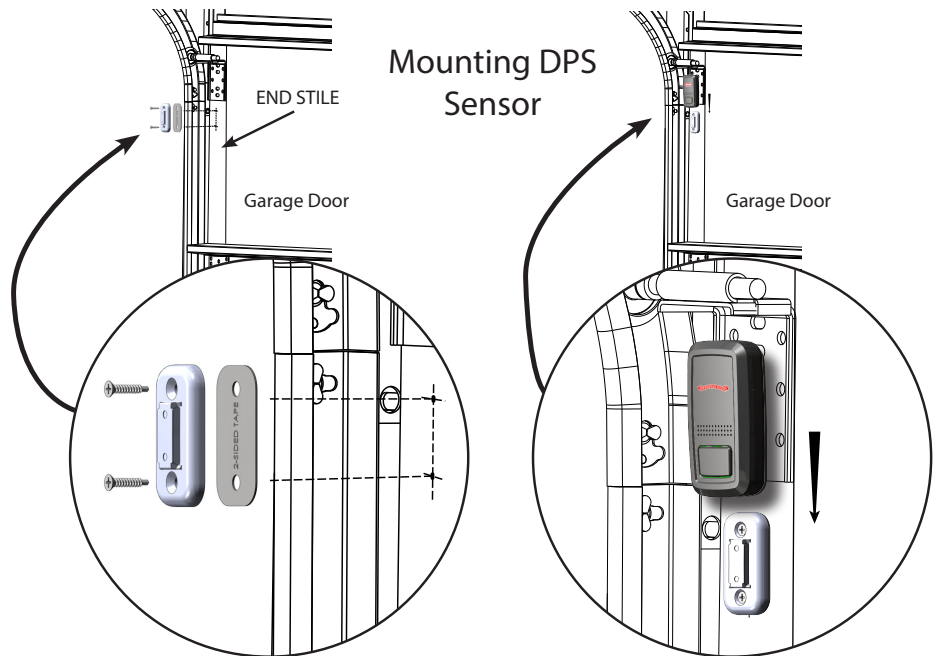

STEP 7

Complete the Programming:



1. Restore power to the garage door opener.
2. Follow the on screen prompts to complete the set-up and test the OHD Anywhere™ system.

NOTE: This kit includes one DPS sensor for use with one door only. Additional DPS sensors can be purchased separately from your local Overhead Door Distributor.

NOTE: A white light will flash and an audible beep will sound as an indication that the door is about to move when commanded by the OHD Anywhere™ or other compatible app(s).

Features:

If the garage door opener is operated by any means, the OHD Anywhere™ app will send an alert to your device indicating the status of the garage door.

A log is also created to indicate when the door was operated and by what means.

Visit www.OverheadDoor.com/OHDAnywhere for more information.



**DO NOT RETURN
PRODUCT TO STORE.**

**For technical assistance,
contact OHD Anywhere™
Customer Service at
1-888-901-2750.**

Use of this product, the software embedded within this product and the related application software is subject to the Terms and Conditions available at: www.OverheadDoor.com/OHDAnywhere.

The Genuine. The Original.



Garantie limitée

El Distribuidor de productos Overhead Door Corporation, cuyo nombre aparece más abajo ("Vendedor") garantiza al comprador original del controlador de puerta de garaje OHD Anywhere ("Producto"), sujeto a todos los términos y condiciones del mismo, que el Producto y todos los componentes del mismo estarán libres de defectos en materiales y mano de obra durante un período de Un (1) Año, medido a partir de la fecha de compra:

La obligación del Vendedor bajo esta garantía se limita específicamente a la reparación o sustitución, a su elección, del Producto o cualquier parte del mismo que el Vendedor determine que es defectuoso durante el período de garantía aplicable. Cualquier gasto de mano de obra está excluido y será responsabilidad del comprador.

Esta garantía le otorga derechos legales específicos, y usted también puede tener otros derechos que varían de estado a estado. Esta garantía se otorga al comprador original del Producto solamente, y no es transferible o assignable. Esta garantía se aplica solo al Producto instalado en una aplicación residencial. No cubre cualquier Producto instalado en las aplicaciones de edificios comerciales o industriales. Esta garantía no es aplicable a cualquier instalación no autorizada o inapropiada, modificación o reparación del Producto, o a cualquier Producto o componente que haya sido dañado o deteriorado debido al mal uso, negligencia, accidente, falta de mantenimiento necesario, uso y desgaste normal, o causas de fuerza mayor o cualquier otra causa más allá del control razonable del Vendedor, y no cubre las baterías, piezas faltantes o dañadas de ventas de liquidación o de caja abierta, reparaciones o mantenimiento a componentes de la puerta o del operador, o el no seguir las instrucciones de programación, o incompatibilidad con el enrutador, abridor de puerta de garaje u otro sistema electrónico de su casa.

TODAS LAS GARANTÍAS EXPRESAS E IMPLÍCITAS PARA EL PRODUCTO, INCLUYENDO PERO NO LIMITADO A LAS GARANTÍAS IMPLÍCITAS DE COMERCIALIZACIÓN Y APTITUD PARA UN PROPOSITO PARTICULAR, ESTÁN LIMITADAS EN TIEMPO AL PERIODO DE GARANTÍA APLICABLE REFLEJADO ARRIBA. NINGUNA GARANTÍA, YA SEA EXPRESA O IMPLÍCITA, SE APLICARÁ DESPUÉS DE QUE EL PERIODO DE GARANTÍA LIMITADA HAYA VENCIDO. Algunos estados no permiten limitaciones en la duración de una garantía implícita, por lo que la limitación anterior podrá no aplicarse en su caso.

EN NINGÚN CASO OVERHEAD DOOR CORPORATION SE HACE RESPONSABLE DE, O RESPONSABLE ANTE NADIE, POR DAÑOS ESPECIALES, INDIRECTOS, COLATERALES, PUNITIVOS, INCIDENTALES O INDIRECTOS, incluso si el Vendedor ha sido advertido de la posibilidad de tales daños. Tales daños excluidos incluyen, pero no están limitados a, pérdida de uso, costo de cualquier producto sustituto, u otra pérdida financiera indirecta similar. Algunos estados no permiten la exclusión o limitación de daños incidentales o indirectos, por lo que la limitación o exclusión anterior podrá no aplicarse en su caso.

Las reclamaciones bajo esta garantía deben realizarse al Vendedor del Producto identificado más abajo, inmediatamente después del descubrimiento y dentro del período de garantía aplicable. El Comprador debe dar al Vendedor una oportunidad razonable para inspeccionar cualquier Producto supuestamente defectuoso antes de la remoción o alteración de su condición. Se podrá exigir prueba de compra y/o fecha de instalación, y la identificación como comprador original. Tras la determinación por parte del Vendedor de que el Producto o cualquier parte del mismo están defectuosos durante el período de garantía aplicable, el Vendedor suministrará al comprador con piezas de repuesto o a su elección, un Producto de reemplazo (envío y manejo de cualquier parte o Producto de reemplazo también a cargo del comprador). El Vendedor podrá utilizar piezas nuevas o reacondicionadas, o un Producto nuevo o reacondicionado de igual o similar diseño. También puede contactar al Servicio de Atención al Cliente de ODH Anywhere llamando al 1-888-901-2750 para recibir ayuda con medidas de resolución de problemas. No hay procedimientos de resolución de disputas informales establecidos del tipo descrito en la Ley de Garantías Magnuson-Moss.

The Genuine. The Original.



Garage Door Controller Limited Warranty

The Distributor of Overhead Door Corporation products, whose name appears below ("Seller") warrants to the original purchaser of the OHD Anywhere ("Product") garage door controller, subject to all of the terms and conditions hereof, that the Product and all components thereof will be free from defects in materials and workmanship for a period of One (1) Year, from the date of purchase:

Seller's obligation under this warranty is specifically limited to repairing or replacing, at its option, the Product or any part thereof which is determined by Seller to be defective during the applicable warranty period. Any labor charges are excluded and will be the responsibility of the purchaser.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. This warranty is made to the original purchaser of the Product only, and is not transferable or assignable. This warranty applies only to Product installed in a residential application. It does not cover any Product installed in commercial or industrial building applications. This warranty does not apply to any unauthorized or improper installation, alteration or repair of the Product, or to any Product or component which has been damaged or deteriorated due to misuse, neglect, accident, failure to provide necessary maintenance, normal wear and tear, or acts of God or any other cause beyond the reasonable control of Seller, and does not cover batteries, missing or damaged parts from clearance or open box sales, repairs or maintenance to door or operator components, or any failure to follow programming instructions or incompatibility with your home router, garage door opener or other electronics.

ALL EXPRESS AND IMPLIED WARRANTIES FOR THE PRODUCT, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN TIME TO THE APPLICABLE WARRANTY PERIOD REFLECTED ABOVE. NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THE LIMITED WARRANTY PERIOD HAS EXPIRED. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

IN NO EVENT SHALL OVERHEAD DOOR CORPORATION BE RESPONSIBLE FOR, OR LIABLE TO ANYONE FOR, SPECIAL, INDIRECT, COLLATERAL, PUNITIVE, INCIDENTAL OR CONSEQUENTIAL DAMAGES, even if Seller has been advised of the possibility of such damages. Such excluded damages include, but are not limited to, loss of use, cost of any substitute product, or other similar indirect financial loss. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Claims under this warranty must be made to the Seller of the Product identified below, promptly after discovery and within the applicable warranty period. The Purchaser must allow Seller a reasonable opportunity to inspect any product claimed to be defective prior to removal or any alteration of its condition. Proof of purchase and/or the installation date, and identification as the original purchaser may be required. Upon determination by Seller that the Product or any part thereof is defective during the applicable warranty period, Seller will supply the purchaser with replacement parts or, at its option, a replacement Product (shipping and handling of any replacement part(s) or replacement Product also at purchaser's expense). Seller may use new or reconditioned parts, or a new or reconditioned Product of the same or similar design. You can also contact OHD Anywhere Customer Service at 1-888-901-2750, for assistance with troubleshooting measures. There are no established informal dispute resolution procedures of the type described in the Magnuson-Moss Warranty Act.



The OHD Anywhere™ system is designed to operate on garage door openers manufactured after 1993 and in compliance with UL325 utilizing non-contact safety devices (photocells).

Only for use on standard sectional garage doors.

DO NOT install OHD Anywhere™ on garage door openers without safety photocells.

DO NOT install OHD Anywhere™ on swing-out or one-piece garage doors.

Install DCM in a location where it can be seen and heard while standing in the door opening with the door in the open position.



El sistema OHD Anywhere™ está diseñado para operar en abridores de puertas de garaje fabricados después de 1993 y en conformidad con UL325 utilizando dispositivos de seguridad sin contacto (fotoceldas).

Solo para ser usado en puertas de garaje modulares estándar.

NO instale OHD Anywhere™ en abridores de puerta de garaje sin fotoceldas de seguridad.

NO instale OHD Anywhere™ en puertas que abren hacia afuera o en puertas de una pieza.

Instale el DCM (Módulo de Control de la Puerta) en un lugar donde pueda ser visto y oído mientras está parado en la abertura de la puerta con la puerta en posición abierta.



FCC/IC Statement:

This device complies with FCC Part 15 rules and with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference, and
- (2) This device must accept any interference, including interference that may cause undesired operation of this device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

FCC/IC Statement:

This device complies with FCC Part 15 rules and with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference, and
- (2) This device must accept any interference, including interference that may cause undesired operation of this device.

Declaración de FCC/ICS:

Este dispositivo cumple con las reglas de la Parte 15 de FCC y con las normas RSS exentas de licencia de Industry Canada. La operación está sujeta a las dos condiciones siguientes:

- (1) Este dispositivo no podrá ocasionar interferencia, y
- (2) Este dispositivo debe aceptar cualquier interferencia, incluyendo la interferencia que podrá ocasionar la operación no deseada de este dispositivo.