

GENIE

3 Button Remote

OPERATING INSTRUCTIONS

1 IMPORTANT INFORMATION

This remote is preset for use with the IntelliCode® 2 Access Security System. The remote can be configured for use with the IntelliCode® 1 Access Security System. See "Programming to IntelliCode® 1 Genie® garage door openers" for instructions on switching from IntelliCode® 2 to IntelliCode® 1.

ATTENTION

If your garage door opener has a Serial Number sticker which looks like this, in which the first two numbers are 10 or higher, your opener is equipped with INTELLICODE®2.



Follow the instructions on this page. Otherwise, switch remote from INTELLICODE®2 to INTELLICODE®1 and follow programming directions for your door opener.

WARNING

Moving Door can cause serious injury or death.

- Wall Console must be mounted in sight of door, at least 5 feet above floor and clear of moving door parts.
- **Keep people clear** of opening while door is moving.
- **Do NOT** allow children to play with the Remote or door opener.

If **safety reverse** does not work properly:

- **Close door then disconnect opener** using the manual release handle.
- **Do NOT** use Remote or door opener.
- Refer to Door and Door Opener Owner's Manuals before attempting any repairs.

2 PROGRAM THE OPENER

- 1 PRESS** and **HOLD 5 seconds**
SEE BOTH Blue LEDs come ON
- 2 RELEASE**
SEE round Blue LED come ON
- 3 PRESS** and **RELEASE**
SEE long Purple LED flashing
- 4 PRESS remote and RELEASE**
(the button you want to program.)
SEE long Purple LED come steady ON
- 5 PRESS and RELEASE remote button again**
SEE both LEDs flash Blue and go OFF
- 6 PRESS and RELEASE remote button a third time**
Programming is complete. This remote button can now be used to operate door opener. Repeat as necessary for other remotes or buttons on the same remote.

3 REMOTE OPERATION

- Point Remote at the garage door and press the button. Door will move.
- Press the Remote Button again and the door will stop.
- Press the Remote Button again and the door will move the opposite way. The door automatically stops at the end of the open or close cycle.

4 LOST OR STOLEN REMOTE

ALL Remote Codes will be erased from Opener (powerhead) memory.

These instructions are for openers with the type keypad shown below.

- Press and hold until both lights come **ON blue**. Release button.
 - Lights go out and Round **BLUE** light comes **ON**.
 - Press again and see long **purple** LED flashing.
 - Press both and simultaneously on the powerhead and hold for **5 seconds**.
 - Reprogram the Opener with the remaining Remote(s) (Repeat Section 2 for each remote).
- Test remote operation. Remote should not activate door opener.

Follow these instructions to erase remote codes for **ALL other Genie® openers.**

- Press and **HOLD** the Learn Code button on the powerhead for 10 seconds or until Radio Signal LED indicator goes out.
- Reprogram the Opener with the remaining Remotes following the programming instructions for that powerhead.
- Reprogram the Opener with any Wireless Keypad and other access device using the instructions accompanying those devices.

5 BATTERY REPLACEMENT

Replace remote battery with a **CR 2032** coin cell battery.

- Open the remote case using a washer or coin that fits into the slot at the top of the remote.
- Replace battery. Match battery polarity with symbols inside battery housing.
- Align components and snap case closed.


INTELLICODE® FEATURES

Other models of Genie® garage door openers, remotes, and wireless keypads use IntelliCode® 1 signals to communicate. Remote(s) provided with this unit will transmit either IntelliCode® 1 or IntelliCode® 2 signals.

If you have ...	Use this IntelliCode® programming
One or more IntelliCode® 2 openers with a maximum 3 different openers	Use IntelliCode® 2
Mixture of openers manufactured between 1997 and 2010 (IntelliCode® 1) and new IntelliCode® 2 openers	Use IntelliCode® 2 and/or 1
One or more openers manufactured between 1997 and 2010 (IntelliCode® 1)	Use IntelliCode® 1

NOTE: A maximum of 3 different openers can be programmed to a 3 button remote.

Three button remote

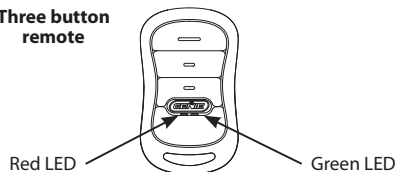

Programming to IntelliCode® 1 Genie® garage door openers

The default IntelliCode® 2 setting must be changed to IntelliCode® 1.

(Follow these same steps to change IntelliCode® 1 back to IntelliCode® 2.)

The LED color displayed on the remote indicates the IntelliCode® mode.

Red = IntelliCode® 1 / Green = IntelliCode® 2

- Select a button on the remote that has NOT been programmed to the new powerhead.
 - Press and hold that button for **10 seconds**.
Both Red and Green LEDs come ON and stay ON.
 - Press the same button **twice** to toggle IntelliCode® selection from IntelliCode® 2 to IntelliCode® 1.
 - Press the same button **again** to confirm toggle. The IntelliCode® selection for this button is set to IntelliCode® 1.
 - Take the remote to the older Genie® garage door opener and follow that opener's instructions to program a new remote.
- Repeat for other Genie® garage remote(s) as necessary.

FCC and IC CERTIFIED

This device complies with FCC Part 15 and RSS 210 of Industry Canada. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which may be determined by turning the equipment OFF and ON, the user is encouraged to try to correct the interference by one or more of the following measures: **1.** Re-orient or relocate the receiver antenna, **2.** Increase the separation between the opener and receiver, **3.** Connect the opener into an outlet on a circuit different from that to which the receiver is connected, **4.** Consult your local dealer. Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

For additional information or help contact Customer Service: Call 1-800-35-GENIE or write:

GMI Holdings Inc. d/b/a The Genie Company
1 Door Drive
Mt. Hope, Ohio 44660

3 Eloigné de Bouton

INSTRUCTIONS OPERANTES

1 INFORMATIONS IMPORTANTES

Cet éloigné est pré-réglé pour l'usage avec l'IntelliCode® 2 Sécurité Système D'accès. L'éloigné peut être géré pour l'usage avec l'IntelliCode® 1 Accès Sécurité Système. Voir « Programmant à IntelliCode® 1 Génie® les ouvre-boîtes de porte de garage » pour les instructions sur la commutation d'IntelliCode® 2 à IntelliCode® 1.

AVERTISSEMENT



Les portes en mouvement peuvent causer des blessures graves ou la mort.

- La commande murale doit être installée à un endroit visible de la porte, à au moins 1,5 m (5 pi) du plancher et à l'écart de toute pièce mobile de la porte.
- **Ne permettre** à personne de se tenir dans l'ouverture de la porte lorsque la porte est en mouvement.

- **Ne pas** permettre aux enfants de jouer avec la télécommande ou l'ouvre-porte.

Si le système d'inversion au contact ne fonctionne pas adéquatement:

- Fermer la porte, puis débrancher l'ouvre-porte à l'aide de la poignée de déclenchement manuel.
- Ne pas se servir de la télécommande ni de l'ouvre-porte.
- Consulter les manuels du propriétaire de la porte et de l'ouvre-porte avant de tenter d'effectuer toute réparation.

ATTENTION

Si ton ouvre-boîtes de porte de garage a un autocollant de Numéro de série qui a l'air de ceci, dans lequel le premier deux nombres est 10 ou plus haut, ton ouvre-boîtes est équipé avec INTELLICODE®2.



Suivre les instructions sur cette page. Autrement, le commutateur éloigné d'INTELLICODE®2 à INTELLICODE®1 et suit programmer des directions pour ton ouvre-boîtes de porte.

2 PROGRAMMER L'OUVRE-BOITES

- 1 LA PRESSE** et **TIENT** de 5 seconde.
VOIR que LES DEUX LED Bleues allument
- 2 RELACHEMENT.**
VOIR autour de LED Bleue est allumé.
- 3 LA PRESSE** et le **RELACHEMENT**
VOIR le clignotement de LED Violet long.
- 4 APPUYER éloigné et le RELACHEMENT (le bouton que tu veux programmer).**



VOIR que LED Violette longue est venue constant SUR

- 5 APPUYER et RELACHER le bouton éloigné encore**
VOIR que le Bleu de LED et saute

- 6 APPUYER et RELACHER le bouton éloigné un troisième temps**
La programmation est complète. Ce bouton éloigné peut être maintenant utilisé pour fonctionner l'ouvre-boîtes de porte. Répéter comme nécessaire pour autre éloigné ou les boutons sur le même éloigné.

3 OPERATION ELOIGNEE

- Eloigné de Point à la porte de garage et appuie le bouton. La porte se déplacera.
- Appuyer le Bouton Eloigné encore et la porte arrêtera.
- Appuyer le Bouton Eloigné encore et la porte déplacera la façon opposée. La porte arrête automatiquement à la fin de l'au cycle ouvert ou proche.

4 ELOIGNE PERDU OU VOLE

TOUS les Codes d'Eloigné seront effacés de l'Ouvre-boîtes (powerhead) la mémoire.

Ces instructions sont pour les ouvre-boîtes avec le pavé numérique de type a montré ci-dessous.

- La presse et la prise jusqu'à ce que les deux lumières allument le bleu. Relâcher le bouton.
- Les lumières sortent et autour de la lumière BLEUE allument.

- La presse et voit encore la LED violette longue.

- Les deux appuyer et simultanément sur le powerhead et la prise pour de 5 seconde.

- Reprogrammer l'Ouvre-boîtes avec le rester (Répète Section 2 pour chacun éloigné).
- Essayer l'opération éloignée. Eloigné ne devrait pas activer l'ouvre-boîtes de porte.

- Reprogrammer l'Ouvre-boîtes avec le rester (Répète Section 2 pour chacun éloigné).

Suivre à ces instructions pour effacer des codes éloignés pour TOUT l'autre Génie® les ouvre-boîtes.

- Appuyer et TENIR l'Apprendre le bouton de Code sur le powerhead pour de 10 seconde ou jusqu'à ce que la diode de Signal radio sort.
- Reprogrammer l'Ouvre-boîtes avec le rester suivre Eloigné les instructions de programmation pour ce powerhead.
- Reprogrammer l'Ouvre-boîtes avec Pavé numérique sans fil et l'autre appareil d'accès qui utilisent les instructions qui accompagnent ces appareils.

1. Ouvrir le cas éloigné qui utilise une rondelle ou une pièce qui ts dans l'entaille en haut de l'éloigné.
2. Remplacer la pile. Egaler la polarité de pile avec les symboles logement de pile d'intérieur.
3. Aligner du cas de composants et fermer a fermé.

